


MAESTRO SOUND PRODUCTS
7373 NORTH CIGERO AVENUE
LINCOLNWOOD, ILLINOIS 60646

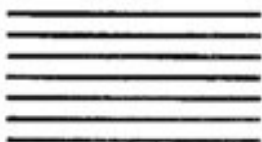

POSTAGE WILL BE PAID BY —

BUSINESS REPLY MAIL
No Postage Necessary if Mailed in the United States

FIRST CLASS
Permit No. 4105
Chicago, Illinois



BG-2 BOOMERANG

Operating Instructions

WHAT IS THE "BOOMERANG"

It's Maestro super wha-wha and volume pedal. It received its name from the fact that it always returns to the exact original setting after scanning a wide range of harmonics. "Boomerang" was the first wha wha on the market, and is currently the most reliable and effective. The Boomerang circuit is responsible for what is known as the "Shaft" sound.

THE "WHA WHA" MODE

The Boomerang is a wide range wha wha pedal. As its shoe is depressed forward, the high harmonics are emphasized. As the shoe is "rolled" back (heel to the floor), the low harmonics are emphasized. A timed movement back and forth creates the well known wha wha sound.

THE VOLUME MODE

If the shoe is depressed forward, with a small amount of extra pressure, the unit will click into the volume mode. Now your Boomerang is a foot volume control. Note that the "switching" volume level is the same from mode to mode. Most competitive wha whas are not.

MAINTENANCE

The only maintenance required on your Maestro Boomerang is occasional replacement of the 9 volt battery. A number 216 Eveready battery is recommended. In order to conserve battery life, be sure your instrument is unplugged from the Boomerang after each usage. Average battery life is estimated to be 40-50 hours.

SERVICE

If this product requires service it should be returned prepaid to:

ALL-TEST DEVICES CORP.
150 WEST PINE STREET
LONG BEACH, NEW YORK 11561

Please include \$4.00 to cover return freight and handling. Returns sent without handling charge included will be shipped back C.O.D.

These units can either be serviced at the above address or by any authorized Norlin service location.

SERVICE AND WARRANTY

Maestro products are warranted to the original purchaser for a period of one year, parts and labor, except batteries. After the warranty period, Maestro products will be repaired at a reasonable charge plus cost of parts. All units must be returned through the dealer prepaid and will be repaired and returned to the dealer freight collect.

REGISTRATION CARD

MAESTRO _____

Model No. _____

Serial No. _____

Date Installed _____ 19____

To obtain the benefit of the warranty plan, I hereby register my maestro as indicated on this card. I have been instructed regarding its proper care and operation.

S O L D B Y	Store _____	No. _____
	Street Address _____	
	City _____	State _____
S O L D T O	Customer's Name _____	
	Street Address _____	
	City _____	State _____

IMPORTANT: Mail This Card Today (To Insure Your Warranty)